

MEMS Mass flow Meter

MF4600 series



User manual (VA.3)



Please read this manual for ensuring correct use of this product. Make the manual available for easy access.

SIARGO LTD.

SIARGO

User Manual ■■■

Introduction

MF4600 series mass flow meters are made with Siargo's proprietary MEMS sensing technology. It applies for clean and dry gas metering and control. The meter is designed with the structure of a rotameter but with the full capability of a digital gas mass flow metrology and LED display. Both instant and accumulated flowrate can be read and displayed. The front buttons let user to access and adjust the parameters as well as stored data. The standard RS485 Modbus enables the remote access and integration.


Features

- Direct mass flow measurement with high accuracy
- Multiple sensing elements for extended rangeability over 100:1
- Easy remote accessible user interface with RS485 Modbus and/or linearized analog data
- Bright LED display for instant and accumulated flowrate with on-site access via front buttons
- Record flowrate patterns with over range indication
- Easy for remote communication and integration
- Compatible with traditional rotameter mechanical connections
- Flow range and mechanical dimensions can be fully customized


Specifications

Parameters		Units
Flow Range	0 ~ 100, 200, 500 0 ~ 1, 2, 5, 10	sccm SLPM
Rangeability	50:1	
Accuracy	$\pm(2.5+0.5FS)$	%
Repeatability	± 0.8	%
Offset stability	0.1	%FS
Span stability	± 0.12	%/°C
Response time	10 (default, can be changed via button)	msec
Power supply	8~24Vdc, 50mA max.	
Output	Analog, RS232/RS485 (Modbus)	
Display	LED with 2 indicators	
Display units	Instant flow: SLPM; Accumulated flow: SL	
Resolution	0.001, 0.01, 0.1, 1 unit, selectable	
Pressure loss	100	Pa
Max pressure	0.5	MPa
Temperature	-10 ~ +55	°C
Storage	-20 ~ +65	°C
Humidity	<95%RH, no condensation	
Mechanical	NPT-F 1/2	
Key board	3 keys	
Electrical	5 pins, CD R-5	
Calibration	Air (20°C, 101.325 kPa)	


Dimensions

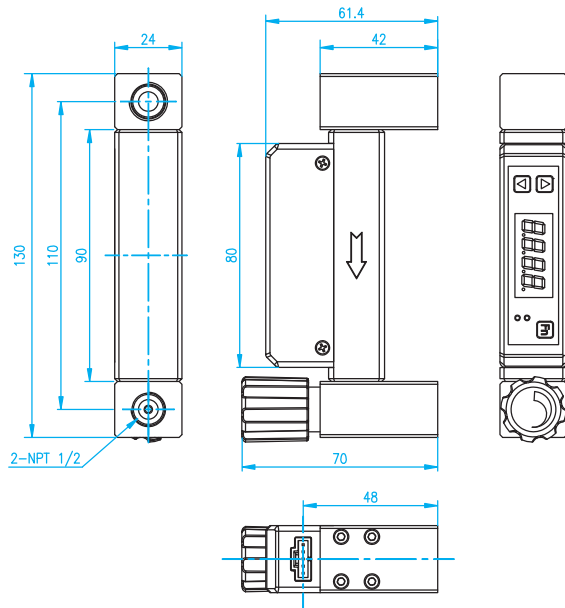

Description

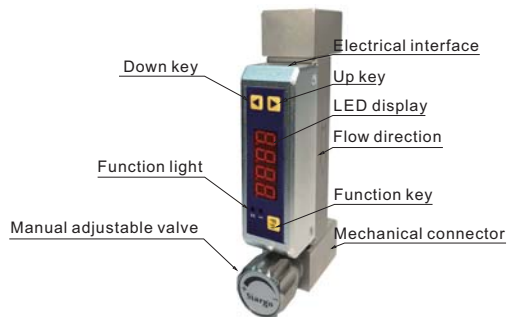

Product selection

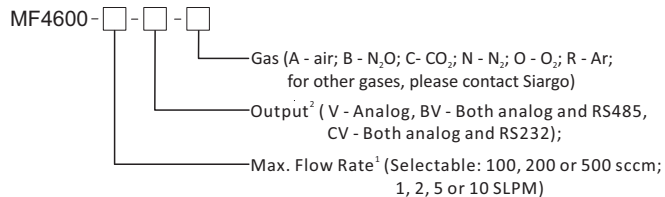

¹ Max. flow rate number only, for example, 100 meaning full scale flow rate of 100 sccm.
5 meaning full scale flow rate of 5 SLPM);

² The sensor shipped with standard analog output. RS232/RS485 is optional.

Pin definition

Pin	Color	Definition
1	Blue	RS485B
2	Green	Analog output
3	Red	VCC, Power + (8 ~ 24Vdc)
4	Black	GND, ground - (power/signal)
5	Yellow	RS485A




Installation

Please check the items in the package upon opening the box:

- The package should contain the followings
 - MF4600 mass flow meter 1
 - Electrical cable 1
 - User manual 1
 - QC certificate 1
- Make sure no mechanical damages or visual damages;
- Connect the electrical cable according to the pin definition;
- Connect power supply and warm up for 2 minutes before use.

Operation

The meter shall display instant, accumulated and peak-valley flowrate. The indication light shall be lighted accordingly. Please see the detailed description below.

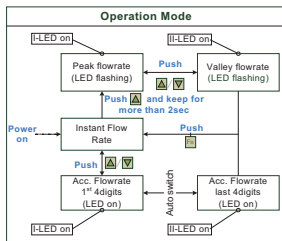

Instant flowrate display

1. Instant flowrate is a default display mode, both LED (I and II) will be off.
2. Instant flowrate is displayed by 4 LED digit with a decimal, the unit is SLPM
3. When the instant flowrate is over the allowed range, I-LED (over max) or II-LED (below min) will be flashing.
4. If I-LED and II-LED flash at the same time, it indicates that the actual flowrate is over the calibrated range or the display value is incorrect.

Accumulated flowrate display

1. The accumulated flowrate is displayed by 8 digits that is separated with two 4 digit display where I-LED indicates the first 4 digits and II-LED indicates the last 4 digits. The units is SL.
2. The accumulated flowrate can be reset via the keyboard.

NOTE: The flow accumulation will be saved every 3 minutes. For instance:

- The flow accumulation will not be saved if power off @ 2 minutes.
- The flow accumulation will be the value of 33 minutes if power off @ 34 minutes.

Peak-Valley flowrate retrieval

1. The data of the last registered peak-valley flowrate can be retrieved via the keyboard.
2. When the peak flowrate value is displayed and flashed, the I-LED will light.
3. When the valley flowrate value is displayed and flashed, the II-LED will light.

Menu settings

The Menu Settings will allow the user to execute keyboard lock/unlock, reset accumulated flowrate, reset offset, set time, response time, instant flow decimal point etc.

Keyboard lock

This function shall prevent unintended changes of the parameters by press the keyboard. When keyboard is locked, the menu function is disabled.

Accumulated flowrate reset

This function shall reset the accumulated flowrate, and the meter will re-start from null.

Offset reset

This function shall reset the offset which may be due to drift after a certain period of performance. It shall help for improving accuracy. **Note:** When performing offset reset, make sure there is no flow in the meter otherwise it will have impact to the accuracy.

Sampling time

This function allows user to set the sampling time between analog output and digital output via the serial port. Once the setting is done, it will be immediately effective but the settings will only be saved into the EEPROM after switch to another function.

Display	4.001	4.002	4.005	4.010	4.020	4.050	4.100
Sampling	10ms	20ms	50ms	100ms	200ms	500ms	1000ms

Display update time


This function allows the user to set the display update time of the meter. Once the setting is done, it will be immediately effective but the settings will only be saved into the EEPROM after switch to another function.

Display	5.025	5.050	5.100	5.200
Update	250ms	500ms	1000ms	2000ms

Peak-valley values reset

This function allows user to reset the peak value to null.

MENU SETTING MODE

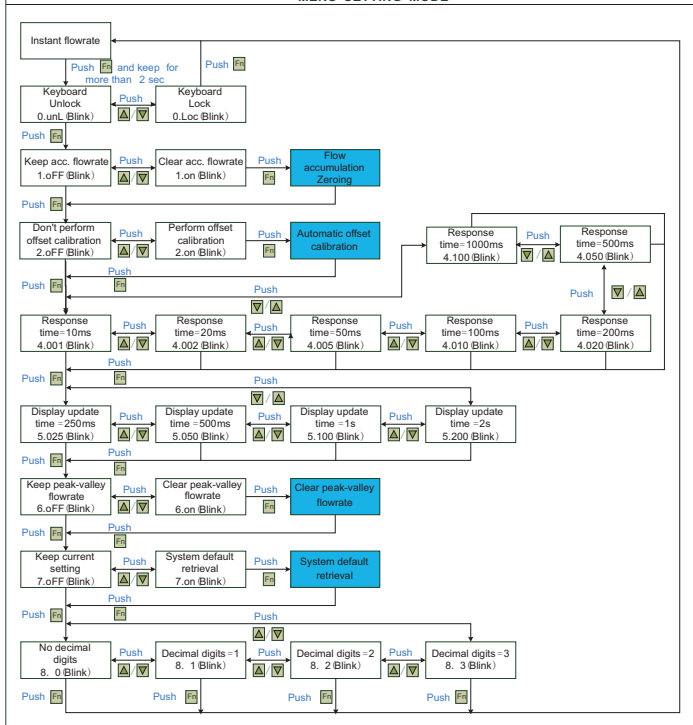

Reset to factory default value

This function allows user to reset all parameters to factory default values.

Decimal setting for instant flowrate

This function allows user to set the decimal point of instant flowrate.

Note: when full scale flowrate is 100, 200 or 500 sccm, 1 decimal can be set, e.g. 123.4 sccm, when full scale flowrate is 1, 2 or 5 SLPM, 1, 2 or 3 decimals can be set, e.g. 1.2 SLPM, 1.23 SLPM or 1.234 SLPM.

RS232/RS485 communication

For purposes of computer control and networking, the RS232/RS485 is used for communication with the following settings:

Baud rate (Bits per second): 9600

Date bits: 8;

Stop bits: 1;

Parity: None;

Flow control: None.

The protocol is based on the standard Modbus communication protocol. RS232 model supports single meter communication, and RS485 model supports either single meter communication or multi-meter networking. For detailed information, please contact the manufacturer.

Safety and Warranty**Wetted Materials and Compatibility**

The meter body is made of polycarbonate and 316 stainless steel. Sensors comprise of silicon, silicon nitride and silicon dioxide and the sensor surfaces are passivated with silicon nitride and silicon dioxide. The electronic sealing is provided by RTV (room temperature vulcanizing) silicone sealant WR-704 composed of $\text{HOCH}_2(\text{SiO})_n\text{CH}_2\text{H}$.

Safety Precautions

The product is designed for use with general purpose gases such as air and nitrogen. It is advised that the products are best used for non-explosive clean gases. The meters cannot be used for gas metrology of fluoride or fluoride containing gases. For updates of the product certification information, please contact manufacturer or visit www.Siargo.com. Use for other gases such as extreme corrosive and toxic may cause the product malfunctioning or even severe damages. The product sealing is ensured to work under working pressure of 60 psi and is leakage proof before the shipment. But cautions and further leakage test are important at installation as well since any leakage could cause severe safety issue. The power supply for this product requires a voltage supply of 8-24 Vdc, all precautions and measures for electrical voltage handling must apply.

Attention: Any alternation and/or improper use of the product without the permission of the manufacturer can cause unpredicted damages and even injuries or other severe situations. Siargo Ltd. or any of its employees, subsidiaries shall not be hold and indemnified against such consequences due to such circumstances via improper use of the product.

All maintenance of the product should be done by trained and certified personnel by Siargo Ltd.

For further information, please contact the manufacturer.

Environmental compliance

Siargo commits to be in compliance with the environmental regulations. This includes all package materials. Please dispose the corresponding materials by it categories, such as wood, paper, plastics. For the disposal of the entire product, please follow the electronics disposal regulations and laws.

Customer service and Contact

Siargo shall guarantee its product quality and ensure the quality assurance in its entire manufacture process. For any questions or technical support, please contact at the following address and we shall response timely.

Headquarters

Siargo Ltd.
3100 De La Cruz Boulevard, Suite 210,
Santa Clara, California 95054, USA
Phone: +01(408)969-0368
Email: info@Siargo.com

Representative in US

Servoflo Corporation
75 Allen Street,
Lexington, MA 02421, USA
Phone: +1-781-862-9572
Email: info@servoflo.com

Representative in Europe

IDENTIC GmbH
In der Siedlerruh 24
69123 Heidelberg / Germany
Phone: +49-(0)6221-7509777
Fax: +49-(0)6221-7509779
Email: info@identic.de

Representative in Japan

Marubeni Information Systems Co., Ltd.
Device Solutions Department
14th Floor, Shinjuku Garden Tower,
3-8-2, Okubo, Shinjuku-ku, Tokyo 169-0072, Japan
Phone: +81-3-4243-4160
Fax: +81-3-4243-4198
Email: siargo@marubeni-sys.com